





HOW TO FIT EDGE ADAPTERS (PVC FENCE ADAPTER VERSION)

These adapters are intended for mounting a pair of Polaris Hinges to a PVC fence.
The Gate is typically 102mm wide x 63mm deep (4in x 2 1/2 in) & the Post is 127mm X 127mm (5in x 5in).


1. First step will be to fasten the adapters to the hinge.
Use the provided Stainless M6x16mm screws to create a Hinge assembly

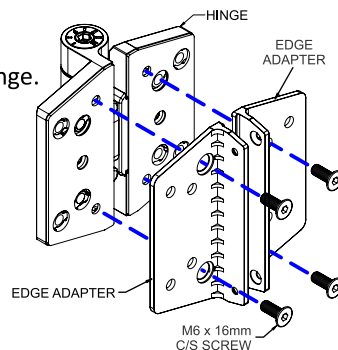


2. Position the hinge assembly onto the Gate and Post which makes a gap of 20mm (3/4in)

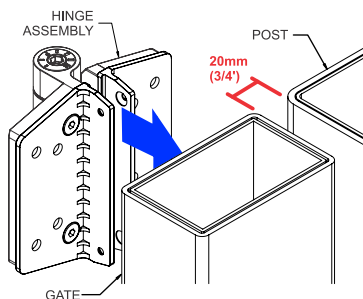

3. Securely fasten the hinge as per its Install instructions
(Screws provided with the hinge)

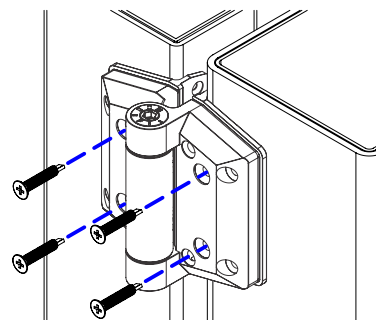

4. To finish the installation, open the gate and install the small screws, as provided (8Gx16mm C/S), through the edge adapters holes.

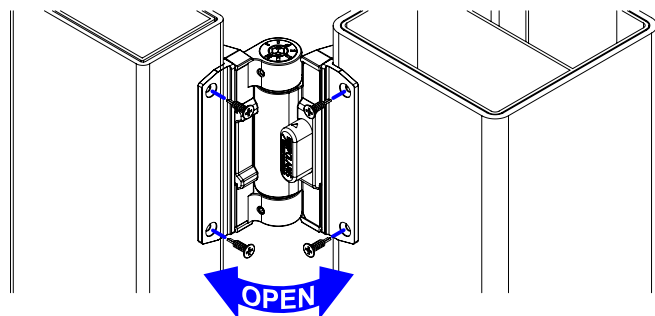

POLARIS SOFT CLOSE HINGE IS AN AUSTRALIA DESIGN AWARD™ WINNER – Glass Hardware Australia
WWW.POLARISHINGE.COM.AU – INFO@POLARISHINGE.COM

DIMENSIONS TEMPLATE

